



### ***Fat, super-sustaining fuzz***

***Sustain:*** This controls the intensity of the fuzz and sustain. Different distortion character will come from different settings of this knob; more aggression and attack comes with higher settings.

***Volume:*** This sets the output volume. You can adjust your Skreddy Pedal to roughly the same volume as your bypass signal (around noon) or you can boost your signal for a fatter tone.

***Tone:*** Though this tone control is technically a mid scoop, you won't have a problem with this fuzz cutting through a mix. You have radical control over the sound from dark and fat to thin and stabbing.

## **Power**

9v battery is not included. To install or change a battery, remove the bottom cover using a Phillips screw driver. To prevent a battery (if you use one) from draining while the pedal is not in use, remember to un-plug the input cable from the pedal's input jack. The battery is also disconnected from the circuit when an adapter is plugged into the DC jack.

You may also supply external power through an AC adapter. All Skreddy Pedals accept the industry-standard 9v DC plug (5.5mm barrel x 2.1mm center coax), with the center being negative and the barrel being positive. Please use a quality, regulated, filtered power supply.

## **Service**

Email Skreddy Pedals at [marc@skreddypedals.com](mailto:marc@skreddypedals.com) if your pedal needs repair.