



Raw, aggressive, sustaining fuzz
"It's like a punch in the face."

Sustain: This controls the intensity of the fuzz and sustain. Different distortion character will come from different settings of this knob; more aggression and attack comes with higher settings.

Volume: This sets the output volume. You can adjust your Skreddy Pedal to roughly the same volume as your bypass signal (unity gain is around 9:00 o'clock) or you can boost your signal for a fatter tone.

Tone: Though this tone control is technically a mid scoop, you won't have a problem with this fuzz cutting through a mix. You have radical control over the sound from dark and fat to thin and stabbing.

Power

9v battery is not included. To install or change a battery, remove the bottom cover using a Phillips screw driver. To prevent a battery (if you use one) from draining while the pedal is not in use, remember to un-plug the input cable from the pedal's input jack. The battery is also disconnected from the circuit when an adapter is plugged into the DC jack.

We include a protective cover on the battery clip to prevent it from shorting against anything inside the box if you do not use a battery.

You may also supply external power through an AC adapter. All Skreddy Pedals accept the industry-standard 9v DC plug (5.5mm barrel x 2.1mm center coax), with the center being negative and the barrel being positive. Please use a quality, regulated, filtered power supply.

Service

Email Skreddy Pedals at marc@skreddypedals.com if your pedal needs repair.